


2

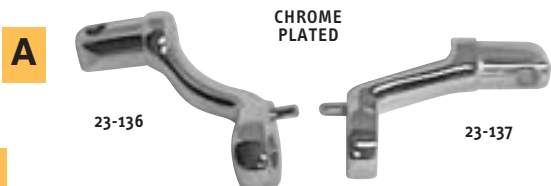

### A. FOOTPEG SUPPORTS FOR XL


Footpeg supports made of cast steel. Perfect chrome. Comes with locator pin on back.

- 23-135** Left support for 1977 thru 1985. SOLD EACH  
OEM 50948-75.
- 23-136** Left support for 1986 thru 1990. OEM 50948-86A.
- 23-137** Right support for 1977 thru 1979. OEM 50949-75.

**B**

CHROME PLATED

**COLONY**

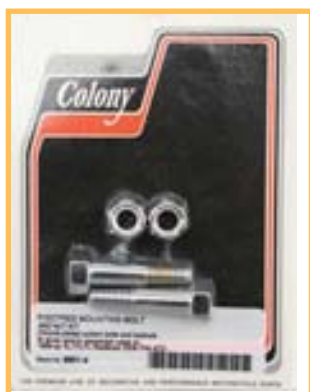

### B. FOOT PEG MOUNTING SHOULDER BOLTS NUT KITS

Custom shoulder bolts & locknuts to mount driver & passenger pegs.

- 123-15** Fits FX & XL driver and FL passenger SOLD AS KIT  
1952 & later. OEM 50970-52.
- 123-14** Fits FX & XL passenger 1969 & later. OEM 4721.


**C**



### C. O-RING STYLE HIGHWAY PEGS WITH BRACKETS

- 23-124** For FL & FX, all years. SOLD AS KIT
- 23-125** For Sportster® 1952 thru 1981. SOLD AS KIT
- 22-3** Replacement O-rings. SOLD AS PKG. OF 10

**D**

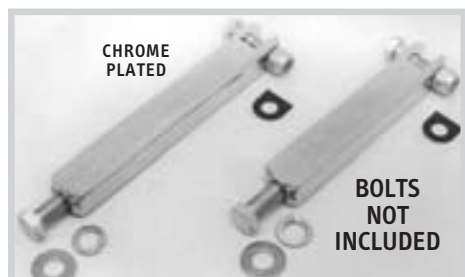

### D. HIGHWAY FOOTPEG MOUNTING KIT

These mounting brackets enable any set of male footpegs to be mounted into the lower front engine mounts forward of the driver pegs.

- 23-141** Fits Sportster® late 1984 & later. SOLD AS KIT  
Replaces OEM 49159-88T.

### E. 6 INCH FOOT REST RISER FOR BIG TWIN

**U.S.A. MADE** riser increases leg room and passenger comfort. Includes polished aluminum mounting block and necessary hardware.

- 23-122** For 74" 1965 & later. SOLD AS SET

**E**

CHROME PLATED



### F. ORIGINAL H-D® STYLE FLOORBOARD BRACKET KITS

If you no longer have the stock mounting brackets, these replacement bracket kits are just what you need.

- 123-7** Bracket kit for aluminum primary. SOLD AS KIT
- 123-8** Bracket kit for steel ("tin") primary.
- 123-9** Weld-on tabs for steel ("tin") primary.

**F**

