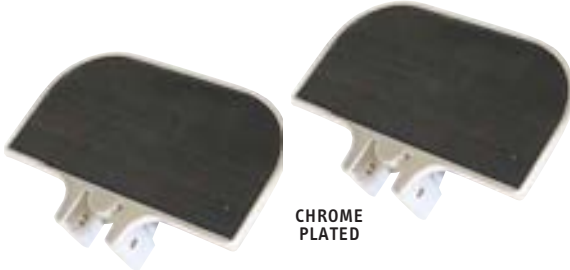


ACHROME
PLATED**2****A. UNIVERSAL MINI FLOORBOARD KIT**

Can be used as passenger or driver floorboards on bikes with clevis style mounting brackets.

123-27

SOLD AS KIT

BCHROME
PLATED**B. PASSENGER FLOORBOARDS**

Beautifully designed with black rubber insert. Bolts to existing foot peg mounts.

123-13 Fits all XL & FL models.

SOLD AS PAIR

C. FLOORBOARD HINGE AND FOOTREST BOLT KITS

Cad plated reproduction of special shoulder bolts, pins and bushings to mount floorboards and buddy footrests.

123-22 Bolt kit. Fits 1941 thru 1981.

SOLD AS KIT

123-23 Bolt kit. Fits floorboards and buddy foot-rests 1941 thru 1964.**123-28** Bolt kit. Fits 1982 & later FL & FX with floorboards.**D**

116-246

D. ULTIMA® SOFTAIL® STYLE SHOCKS

- ◆ Unmatched value.
- ◆ New tooling.
- ◆ Superior damping.
- ◆ Fully adjustable.

SEE PAGE 2-55 & 2-56 FOR SHOCK BOLTS

FXST 1984 THRU 1988**116-246** Black adjustable shocks.

SOLD AS PAIR

116-228 Chrome plated adjustable shocks.**FXST 1989 THRU 1999****116-229** Black adjustable shocks.

SOLD AS PAIR

116-231 Chrome plated adjustable shocks.**FXST 2000 & LATER (NOT SHOWN)****116-232** Black adjustable shocks.

SOLD AS PAIR

116-233 Chrome plated adjustable shocks.

116-228

E**E. NARROW BODY ADJUSTABLE SHOCKS FOR SOFTAIL**

O.D. of this shock is 2" - lowering capability up to 1 3/4".

116-257 Fits Softails 1984 thru 1999.

SOLD AS PR.

116-258 Fits Softails 2000 & later.